



CONNECTOR PLATES & ACCESSORIES

• Holes are drilled to accept $\frac{3}{8}$ " and $\frac{1}{2}$ " bolts


CONNECTOR PLATES & ACCESSORIES

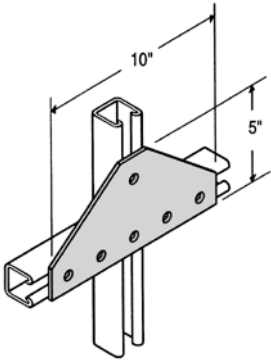


CS-119
6 Hole Heavy Duty T

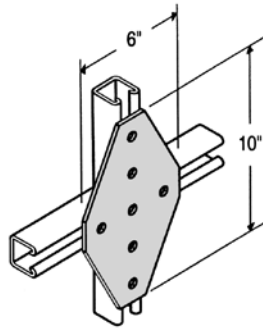


CS-120
7 Hole Heavy Duty X

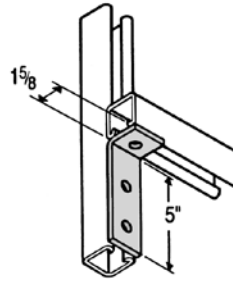


CS-205
3 Hole 90°

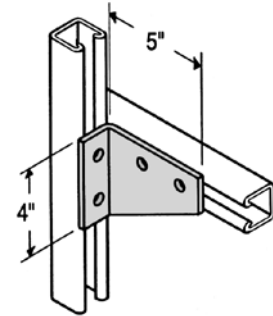


CS-209
4 Hole Heavy Duty 90° Right

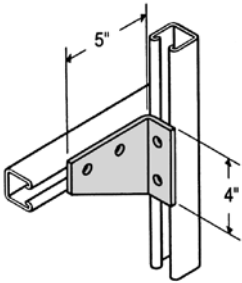


CS-210
4 Hole Heavy Duty 90° Left

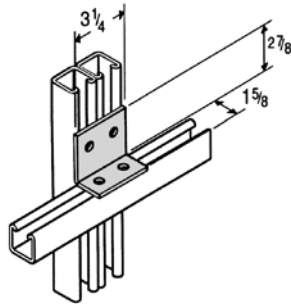

CS-211
4 Hole 90° Stubby

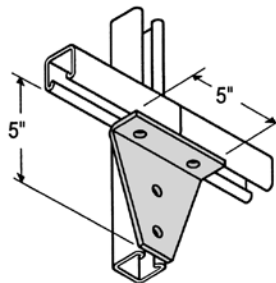

CS-226
4 Hole Heavy 90° T

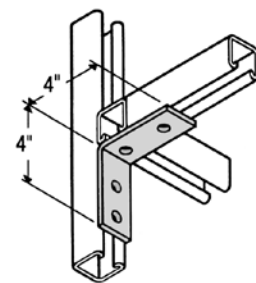


CS-405
4 Hole 90°

CS-S-15P-10-P/V*

Strut with Pre-Drilled Holes


* Use P for polyester resin and V for vinyl ester resin.

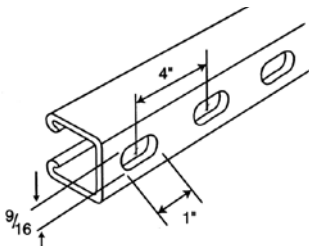

When using this strut, divide max load (pg. 4 & 5) by 3 to obtain allowable loads.


CSCI

Concrete Insert

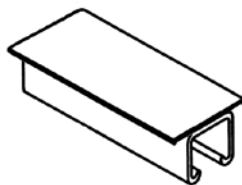

CSCS

Plastic Closure Strip

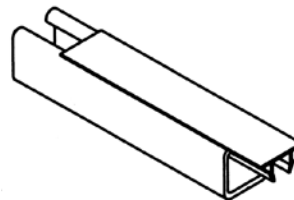

CSFI

Plastic Foam Insert for temporary use during concrete pour

